 


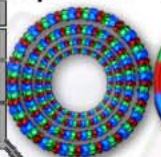


Custom
Color Mode
#1


Strobe
Pattern
Option #1



 
Ribbon XL
Pattern
Option #2

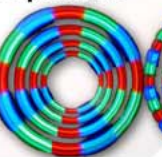


Strobe XL
Pattern
Option #3

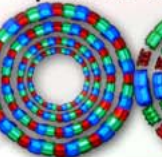 


SOS
Pattern
Option #4

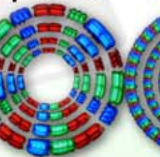 


Strobe SS
Pattern
Option #5

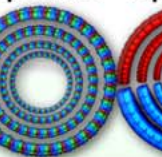 


Comet
Pattern
Option #6

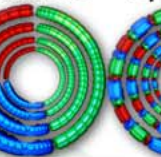 


Dash Dot
Pattern
Option #7

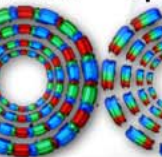 


Stribbon
Pattern
Option #8

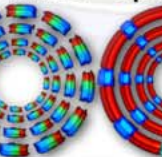 


Fuzion
Pattern
Option #9

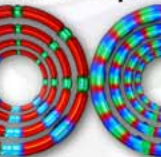 

Ribbon SS
Pattern
Option #10

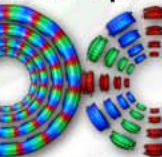 









Pulse
Pattern
Option #11

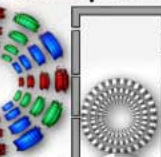 



Demo
Pattern
Option #12



    
 
 
 
 
Rainbow
Color Mode
#2

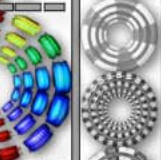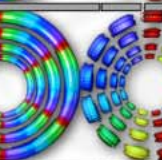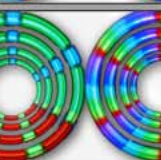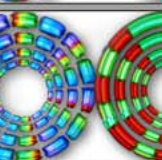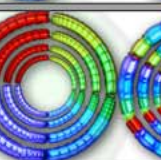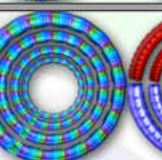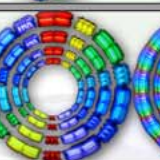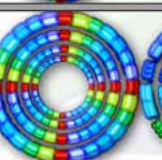



Repeat
Color Mode
#3

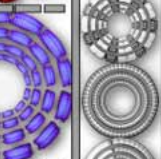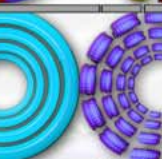  


Triples
Color Mode
#4

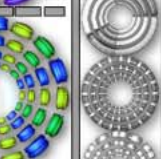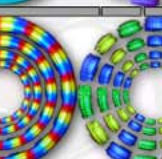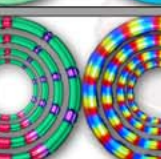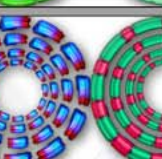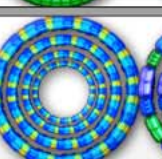     

Hyper
Color Mode
#5

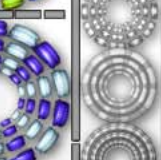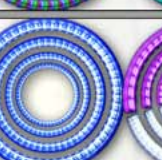  

Shuffle
Color Mode
#6

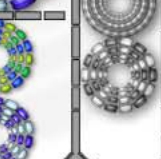 

Mode & Option Function Guide >>>

-Color Modes Function: The Color Mode is the custom and preset color scheme arrangements displayed by the light.

-Pattern Options Function: The Pattern Option is the blinking patterns that will affect the Color Modes displayed by the light.

Color Mode Guide >

-Custom Color Mode: The Custom Color Mode by default displays red, green and blue colors. These colors can be customized in the Custom Color Menu to any combination the user desires. Also, the custom colors order can be adjusted in interesting ways using the Custom Color Sequence Menu. **[Tip]:** Check the back cover of this sheet to explore the Custom Color Menu and the Custom Color Sequence Menu guides to take full advantage of the Custom Color Mode.

-Rainbow Color Mode: The Rainbow Color Mode displays all the colors of the rainbow at the same time in the correct order of the color spectrum.

-Repeat Color Mode: The Repeat Color Mode displays a single color for a short period before auto cycling to the next color, starting with red and ending with purple.

-Triples Color Mode: The Triples Color Mode displays a preset three color combination for a short period before auto cycling to the next three color combination.

 
-Hyper Color Mode: The Hyper Color Mode displays a single color paired with the color white for a short period before auto cycling to the next color paired with white.

-Shuffle Color Mode: The Shuffle Color Mode displays Color Modes #1 through #5 using any Pattern Option selected. Each Color Mode will display for a short period of time before auto cycling to the next Color Mode in a continuous loop. **[Tip]:** Both the Shuffle Color Mode and Demo Pattern Option display a (White) color flash when selected. Set the Shuffle Color Mode to the Demo Pattern Option to cycle through all Color Modes and Pattern Options available.

-Custom Color Menu Function: The Custom Color Menu allows you to easily program the light with any variety of your favorite Custom Color combinations as many times as you want. The previous Custom Color combinations is automatically overwritten when creating a new Custom Color combination.

-Enter Custom Color Menu: To enter the Custom Color Menu {Light must be OFF}, hold down the button for 3 seconds until the light begins to display a (Multi) color flash and then release. You should now see the color #1 (Red), confirming you have successfully entered the Custom Color Menu.

-Program Custom Color Menu: Click the button to cycle between the #1 through #15 available Custom Colors, after the last color #15 (Blank) the cycle will start over with color #1 (Red). Find the first Custom Color that you would like to save and hold down the button, continue holding as the light turns OFF and release after the light turns back ON to the color #1 (Red). You have now saved your first Custom Color, and you can repeat this step for as many colors as you would like to select. When you are ready to save your final Custom Color, hold down the button, but this time release when the light turns OFF to save and exit the Custom Color Menu. The Color Mode #1 will now display your saved selection.

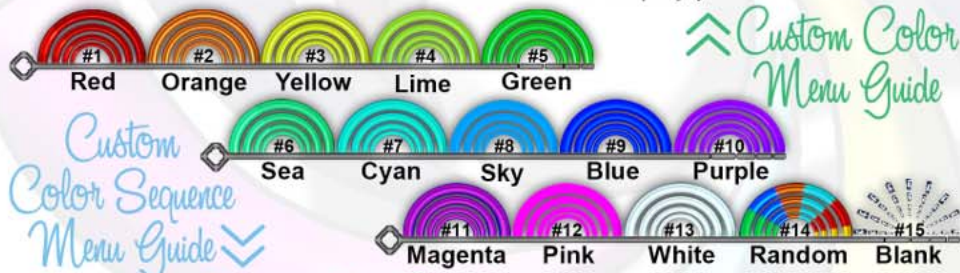


Custom Color Sequence Menu Guide

-Custom Color Sequence Menu Function: The Custom Color Sequence Menu modifies your Custom Colors order arrangement in multiple ways. Such as duplicating, shuffling and blending colors for an even more beautiful display.

-Enter Custom Color Sequence Menu: To enter the Custom Color Sequence Menu {Light must be OFF}, hold down the button for 5 seconds until the light begins to display a (White) color flash and then release. You should now see the #2 Multiply Sequence displaying your current Custom Color selection, confirming you have successfully entered the Custom Color Sequence Menu.

 -Program Custom Color Sequence Menu: Click the button to cycle #1 through #4 available Custom Color Sequences, the light will display what the Custom Color Mode looks like based on you current selected Custom Color Sequence. To save a Custom Color Sequence, hold down the button, when the light turns OFF release, and your Custom Color Sequence will be saved. The Color Mode #1 will now display your Custom Color and Custom Color Sequence Selection.

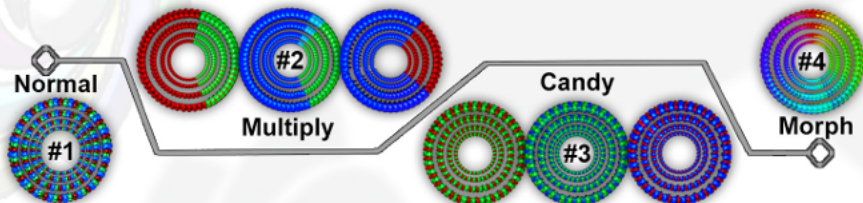

Tip 1: Install Batteries into the Glow Stick

- The battery door is located in the **middle of the glow stick**, opposite from the buttons.
- Using your **finger or a small flat head tool**, pry the battery door open from the top utilizing the notch.
- Use **1 AAA type battery** with the positive side facing up towards the top of the glow stick.

Tip 2: Glow Stick Quick Button Controls

- Each side of the light is **controlled independently** by its own button.
- To **turn the light ON**, click the button once.
- To **turn the light OFF**, hold down the button for 2 seconds until the light turns OFF and then release.
- To **change the Color Mode** {Light must be ON}, click the button to cycle through Color Mode #1 through #6. The light will turn OFF after the last Mode.
- To **change the Pattern Option** {Light must be ON}, hold down the button from any Color Mode, continue holding as the light turns OFF and then turns back ON as it begins to cycle through Pattern Options #1 through #12, release the button when you see the Pattern Option you would like to select.

Tip 3: Install Glow Stick into the Case

- Loosen the fabric loop** near the opening of the case.
- Insert the **glow stick flat bottom first**, though the opening.
- Rotate the glow stick correctly so the **buttons are aligned with the raised button bumps** on the outside of the case.

Tip 4: Adjust the Cord Length

- Pull the desired amount of cord** through the metal ring at the top of the leash near the handle, typically your total poi length should be a little shorter than the entire length of your arm.
- Cut off the excess cord** using scissors and use a lighter to **melt and seal the end of the cord** that's still attached to your leash.
- Flatten the melted cord end** against a hard surface and make sure that the cord end is large enough, so it will **not slip back through the metal ring**.
- Once the melted cord end has cooled, **pull the cord tight** so that the cord end is flush against the metal ring.

Tip 5: Troubleshooting

- If your **light is not turning ON**, try to install a new unused battery.
- If your **light is flickering**, first remove the battery. Using a small flat head tool gently bend both metal battery contacts toward the middle where the battery will be positioned. This will tighten your battery connection.
- To **reset settings** {Light must be OFF} hold down the button for 15 seconds.
- For any **other issues please email** support@ultrapoi.com.

Please take a moment and **leave a product review**, we value your feedback! Also, if you enjoy our gear use [@UltraPoi](https://www.instagram.com/ultrapoi) / [#UltraPoi](https://www.facebook.com/ultrapoi) to share on social!