



**HOME** *of* **POI**

www.homeofpoi.com

## Valo and Lumina LED Hoop Instructions

### Unpacking:

- Your LED hoop will be packed tightly inside the box, please unravel making sure to not put any pressure on the join and proceed to join the ends together. When fully joined together this will sometimes light up as all LED hoops are shipped with 10% or less battery in them, if the hoop does not turn on proceed to charging the hoop.
- Sometimes hoops will not be round when first unpacked, this is normal. Leave your LED hoop in a hot room connected to help it retain its shape after a few uses while still warm.
- Ensure in your box you have; one LED hoop, one LED hoop remote and one wall charger.

### Charging your hoop for the first time:















- Some countries will require an adapter for the wall charger, as all chargers are a standard US plug.
- Plug your charger into the wall and plug the other end of the cable into the charge port found in the end of the hoop when disconnected.
- The plug will show Red on the light and when fully charged will show green, for the first charge it is recommended you leave overnight to give it a good charge as some may arrive deeply under charged.
- Note the LED hoop remote requires the LED hoop to have a good charge for optimized signal strength.



### Storage of your LED hoop

- When not in use, please disconnect the hoop from the button hole and slide apart slightly but not all the way out, This will allow the hoop to retain shape in storage. If the hoop is stored fully connected this will use battery power meaning the next use will require another charge.







## Basic Hoop Remote Functions

-  Power On/Off (Also saving changed functions)
-  Scroll Up through 300 modes
-  Scroll Down through 300 modes
-  Increase effect speed (10 Speed Level Adjustable) with single press only on moving effects / Increase brightness level of static effect by holding for desired level.
-  Decrease effect speed (10 Speed Level Adjustable) with single press only on moving effects / Decrease brightness level of static effect by holding for desired level.
-  Auto play all 300 different modes with one push, or Auto play you custom play list by first pushing the “DIY +” button and then pushing “Menu/Auto”
-  Add current mode to your customs Playlist. (Can add up to 16 modes)
-  Delete current mode from custom playlist while playing through your custom playlist.
-  Scroll up through custom play list modes.
-  Scroll down through customs playlist modes.
-  Static White mode/Long press the white button for 5 seconds, light strip will blink white three times once completed to make current remote the only remote for this hoop.
-  Static Red
-  Static Green mode / Sync other remotes by long press Green button for 5 seconds, light strip will blink green three times once completed.
-  Static Blue. (Pressing the blue button then “Mode +” button to switch to static Yellow, Cyan and Purple.)

## Basic Hoop Remote Parameters.

- Operating Voltage: DC5V. (5V Version)
- Operating Current: <30 mA
- Operating Temperature: -20°C ----- 60°C
- Size: L29 \* W12 \* H3 mm
- Weight: 0.02kg
- Effect Programs: 300 kinds of effects
- Operation: 14-key multifunction wireless remote control (433.92MHZ)
- Maximum control number of pixels: 2048 pixels
- Signal wires maximum length: 30 meter
- RF wireless remote control distance: 50 meter

The following list is for use to change the solid color mode button arrangement.

1. First make sure the hoop is off, if it is not please use the  button to shutdown.
2. Long press  button for 3 seconds to enter the setup menu.
3. Press the  button to adjust until the hoop is showing Red.
4. Press the  button to adjust until the hoop is showing Blue.
5. Press the  button to adjust until the hoop is showing Green.
6. After all have been adjusted correctly press  button to save and exit.
7. Please test this. If it is not correct by turning the hoop back on and selecting one of the 3 color buttons to make sure they are correct.

For more information or support please visit [www.homeofpoi.com](http://www.homeofpoi.com) or email us at [support@homeofpoi.com](mailto:support@homeofpoi.com)

**HAPPY HOOPING!!**