

# ULTRAKNOB

Rechargeable LED Handle

## -Light On Functions

1. Click Button to turn UltraKnob ON.
2. Click and Hold Button Down for 3 seconds until UltraKnob turns OFF.
3. With UltraKnob On, Click Button to move through Color Modes 1-11 then OFF.
4. While on any Color Mode Click and Hold Button down to Change 1 of 3 Flash Patterns, (4th Option is OFF) Release Button while on any of these Options to make Selection.

	Color Mode #1	Color Mode #2	Color Mode #3	Color Mode #4	Color Mode #5	Color Mode #6	Color Mode #7	Color Mode #8	Color Mode #9	Color Mode #10	Color Mode #11
Flash Pattern #1											
Flash Pattern #2											
Flash Pattern #3											

## -Light Off Functions

1. While Light is OFF Click and Hold Button Down (1 seconds) until Light turns Green and Release to Activate Half Brightness Mode.
2. While Light is OFF Click and Hold Button Down (2 seconds) until Light turns White and Release to Activate Full Brightness Mode.



Rechargeable Battery



Dot XL LED Chip



UltraKnob Insert




UltraKnob Cap



UltraKnob



## -Features

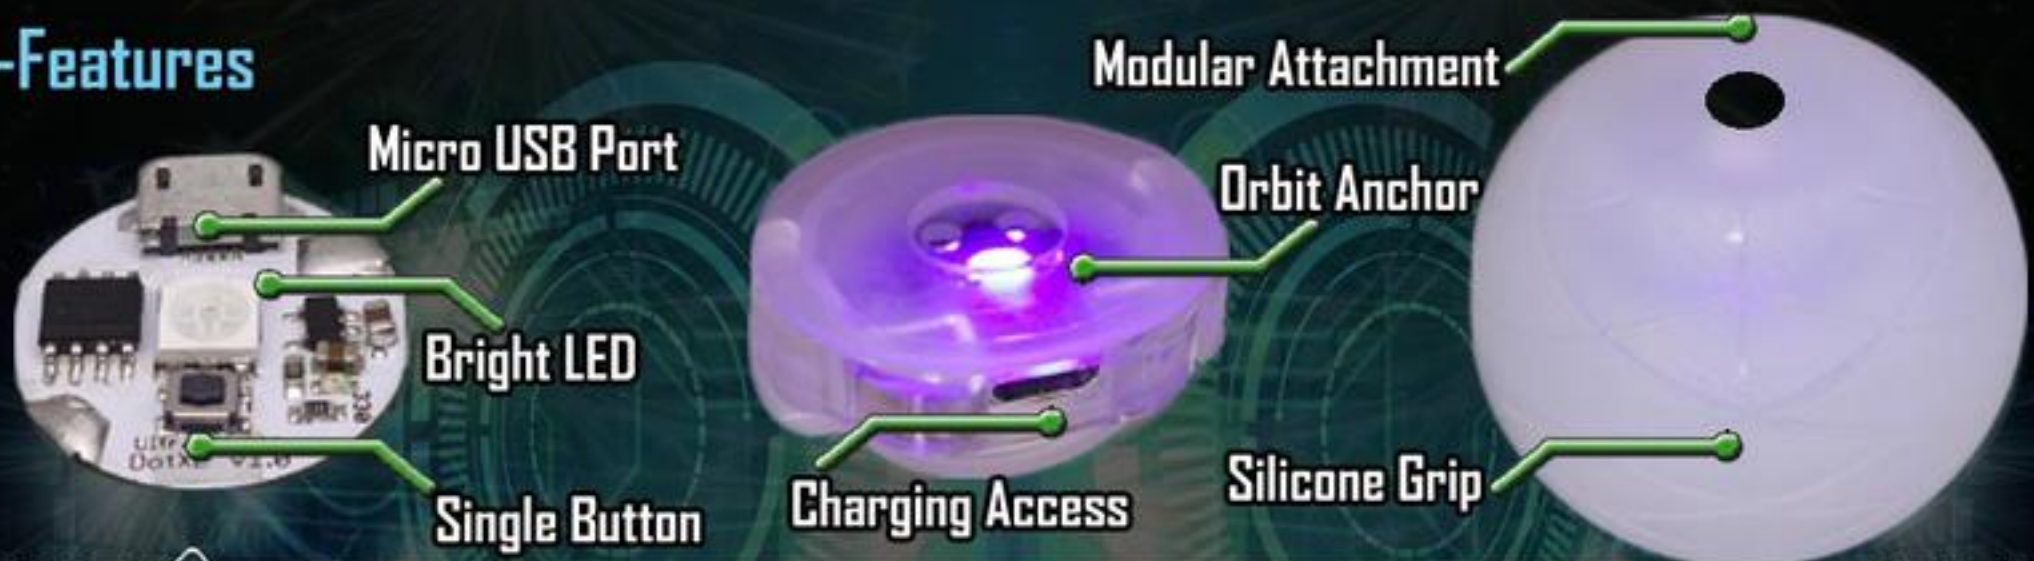

## -Charging



## -Setup

