



LEVITATION WAND

INSTRUCTIONS

**Parts Included & Pre-assembled:**

- 1 Levitation Wand with string and finger loop
- 2 eLite Flow V2 Microlights
- 2 Rubber Caps
- 2 Metal Washers

Wizard hat not included.

Getting Started

1. Locate the lights inside the black rubber ends of the wand. Pinch them lightly and feel for a click.
2. Your lights are eLock Protected so they won't turn on by clicking. Click and hold both ends for 3 full seconds until they flash red.
3. Click to navigate through the lights' modes, or click and hold for a half-second to turn them off. See the enclosed eElite Flow V2 microlight instructions to learn how to use all the features of the light.
4. Loosen the cinch around the white finger loop.
5. Place the finger loop around your index, middle or ring finger, whichever feels best. Wand away!

How to Change Batteries

(Extra 1620 Batteries available at EmazingLights.com)

1. Roll back the black rubber caps until you can easily pull them off of the wand.
2. Remove the lights and washer from inside the caps.
3. Open the clear plastic casing from each light from the back and remove the microlights.
4. Slide the dead batteries out from the bottom of the chips.
5. Insert 2 1620 Batteries under each battery arm with the logo side visible.
6. Snap the casings back in place around the chips.
7. Place the washer flat against the bottom of the light, on the non-button side.
8. Insert the light and washer back into the bottom of the rubber cap.
9. Place the rubber cap back on the glow stick and unroll it until it fits tight and secure.

Use 1-button programming to customize your colors, flashing patterns and more - see the enclosed eElite Flow V2 microlight instructions to learn how!

Happy Wanding!