


Phantom Staff Coupler Assembly

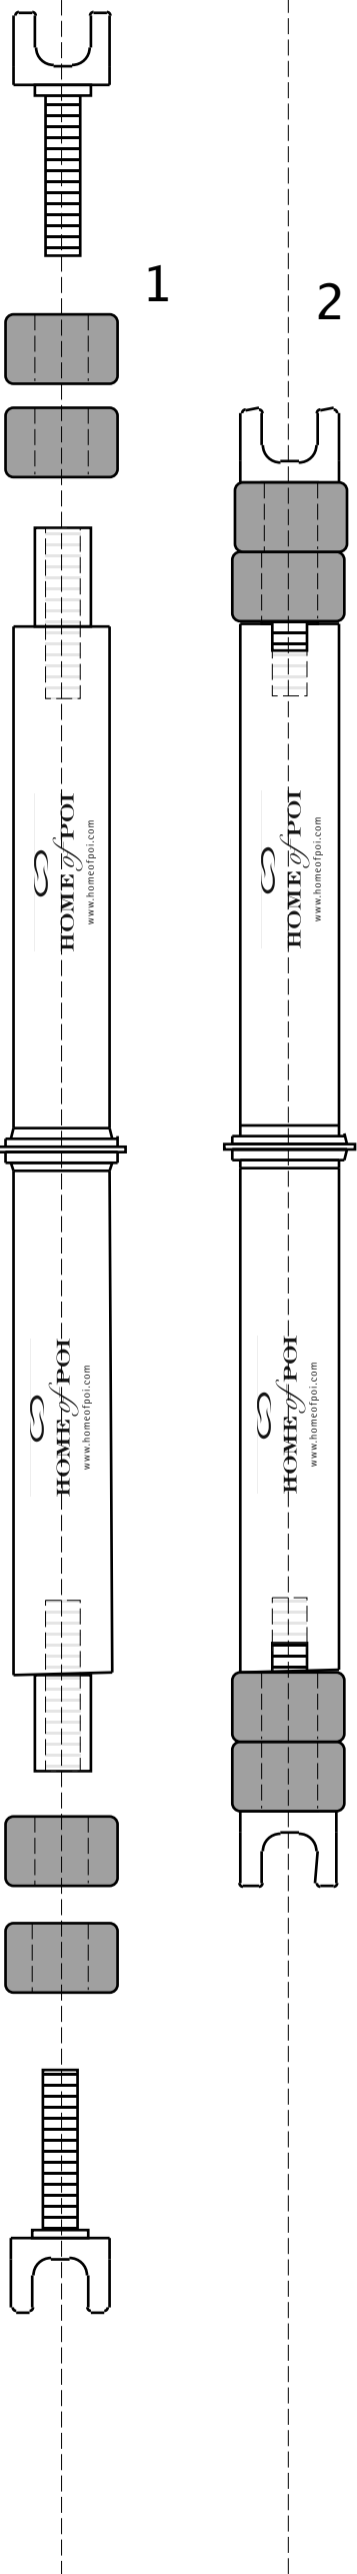

Step 1. Place two rubber rings over each end of the central coupler.

Step 2. Screw the locking bolts through the center of the coupler but without putting any pressure on the rubber rings.

Step 3. Insert the coupler into your staff pipe until it hits the center of the coupler. Depending on how well you did with Step 2 you may need to twist the pipe in order to get it to the center mark.

Step 4. Slide the other staff pipe onto the coupler and twist pipes in opposite directions until tight. If the pipes start to move away from each other then you are undoing the join.

Step 5. Test the join by pulling on the staff pipes, if they come apart too easily then you need to tighten more.

Please keep the coupler and rubber rings free from fuel and dirt.

Please note that your coupler will only fit one type of Phantom Staff, either the Standard or Contact (Heavier Pipe), not both. Different sized Rubber rings are required for each staff type. The rubber rings should only just fit inside the pipe. If there is a gap or they do not fit then you have the wrong size rings.

